

## Installation guide & user manual

### Compartment safe 3000 -manual variant-

Please mount the device on the wall and connect 230 V to the power supply.

The individual compartments can be opened manually with the help of the emergency opening contacts via the electronics compartment, even without connecting electricity / internet. Please switch off the power before working on the inside of the housing.

**Please note: The device may only be connected by an electrician!**

#### Factory settings:

**MasterCode: 4711**

#### Opening of the compartments:

<b>Compartment 1</b>	<b>1111#</b>
<b>Compartment 2</b>	<b>2222#</b>
<b>Compartment 3</b>	<b>3333#</b>
<b>Compartment 4</b>	<b>4444#</b>
<b>Compartment 5</b>	<b>5555#</b>
<b>Compartment 6</b>	<b>6666#</b>
<b>Compartment 7</b>	<b>7777#</b>
<b>Compartment 8</b>	<b>8888#</b>
<b>Compartment 9</b>	<b>9999#</b>
<b>Compartment 10</b>	<b>1000#</b>
<b>Compartment 11</b>	<b>1100#</b>
<b>Compartment 12</b>	<b>1200#</b>

If you have any questions, please feel free to get in contact with us.

The masunt team

## User manual

You can assign up to 8 different codes to each compartment.  
The following codes are preset at the factory:

Comp.	Position	Code
1	0	1111
1	1	
1	2	
1	3	
1	4	
1	5	
1	6	
1	7	
2	8	2222
2	9	
2	10	
2	11	
2	12	
2	13	
2	14	
2	15	
3	16	3333
3	17	
3	18	
3	19	
3	20	
3	21	
3	22	
3	23	

Comp.	Position	Code
4	24	4444
4	25	
4	26	
4	27	
4	28	
4	29	
4	30	
4	31	
5	32	5555
5	33	
5	34	
5	35	
5	36	
5	37	
5	38	
5	39	
6	40	6666
6	41	
6	42	
6	43	
6	44	
6	45	
6	46	
6	47	

Comp.	Position	Code
7	48	7777
7	49	
7	50	
7	51	
7	52	
7	53	
7	54	
7	55	
8	56	8888
8	57	
8	58	
8	59	
8	60	
8	61	
8	62	
8	63	
9	64	9999
9	65	
9	66	
9	67	
9	68	
9	69	
9	70	
9	71	

Comp.	Position	Code
10	72	1000
10	73	
10	74	
10	75	
10	76	
10	77	
10	78	
10	79	
11	80	1100
11	81	
11	82	
11	83	
11	84	
11	85	
11	86	
11	87	
12	88	1200
12	89	
12	90	
12	91	
12	92	
12	93	
12	94	
12	95	
<b>Mastercode</b>	<b>100</b>	<b>4711</b>

With the help of the master code, codes can be programmed and existing codes can be changed or deleted:

Enter the master code to access the programming mode.

Master code #

Example: 4711 #

Result: You are now in programming mode.

Enter the position, you want to generate a code for.

Position #

Example: 2 #

Result: Position 2 can now be written.

Enter new code (a code can have a length of up to 8 digits).

New code # new code #

Example: 4567 # 4567 #

Result: Code 4567 is now programmed.

To delete a code from a position, simply enter the # key twice without entering a code. The corresponding position will be deleted in this way.

Press the # key again to exit programming mode.

### **Change of the master code:**

The preset master code (4711) is changed as follows:

Power off + power on

Then make the following entries within one minute:

12347890 # 100 # New master code # New master code #

Please end with #.

Example:

12347890 # 100 # 0815 # 0815 # #

The new master code is now 0815.

### **Switch key tones on/off:**

Press # three times and then press the 'bell symbol'.